


AMR - Artist Mural Replaceable

Installation Guide

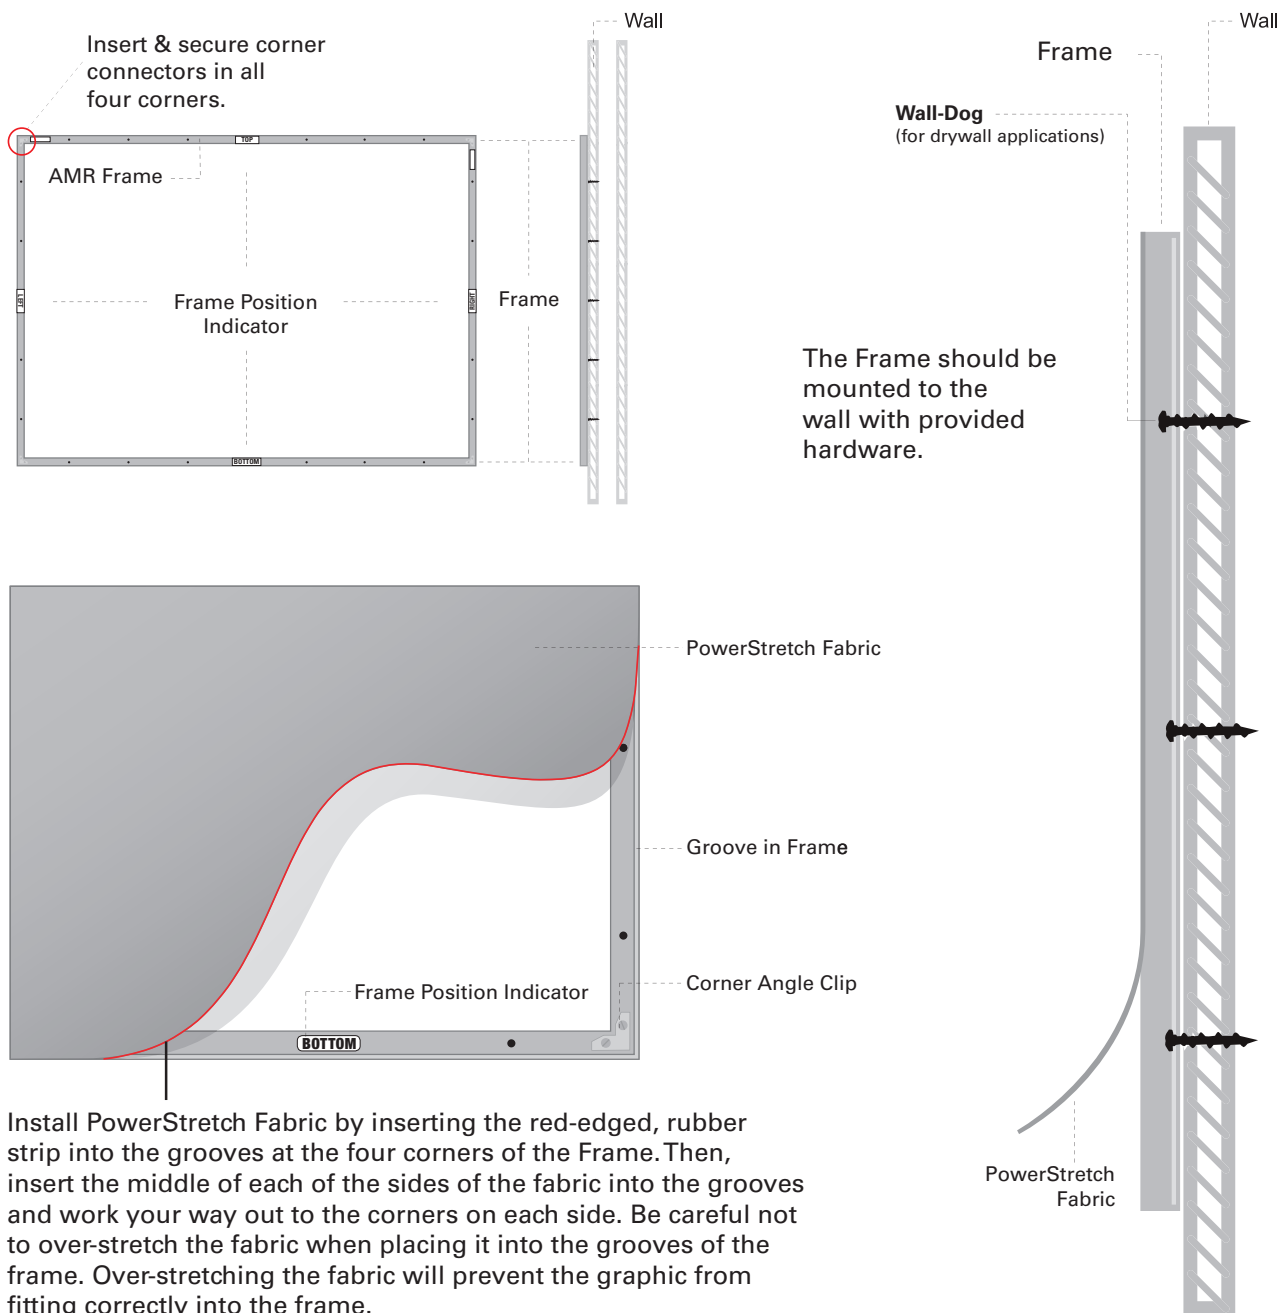

Install PowerStretch Fabric by inserting the red-edged, rubber strip into the grooves at the four corners of the Frame. Then, insert the middle of each of the sides of the fabric into the grooves and work your way out to the corners on each side. Be careful not to over-stretch the fabric when placing it into the grooves of the frame. Over-stretching the fabric will prevent the graphic from fitting correctly into the frame.

Included with every AMR		Tools you will need
4 Frame Sticks	AMR Fabric	Tape Measure
4 Corner Clips	1 Drill Bit	Level
Wall-Dogs		Flathead & Phillips Screwdrivers
* Hardware is attached to the frame in a YELLOW BAG		Hammer Drill - Concrete application
		Regular Drill - Drywall application



If you have any questions regarding the installation procedure please call us at **866-717-4467**. To see a more detailed Step-by-Step Installation Guide, go to <https://www.imbranded.com/step-by-step/>